



⚠ DO NOT rotate the handle violently while driving at high speed.



⚠ DO NOT ride through puddles or other types of water deeper than 1 inch (2 cm).

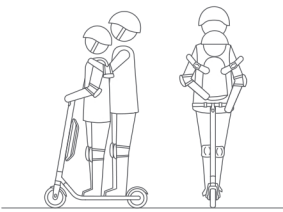


⚠ The KickScooter is for one rider only. Do not carry any passengers. Do not carry a child.

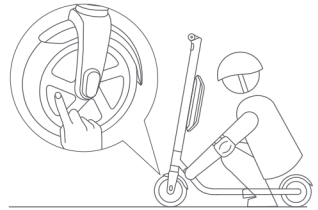

⚠ DO NOT touch the hub motor after riding because it can get hot.



⚠ DO NOT take your hands off the handlebar while riding. Do not ride with one hand only.

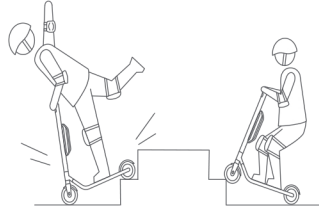

⚠ DO NOT ride up and down stairs or jump over obstacles.

⚠ WARNING
Always keep both hands on the handlebar or you risk serious injury due to loss of balance and falls.

Specifications

Dimensions	Length x Width x Height	40,5x18,9x45 in (103x48x113 cm)
Weight	Net	30.9 lbs (14.0 kg)
Rider	Payload	55–220 lbs (25–100 kg)
	Recommended Age	14+ years
	Required Height	3' 11"–6' 6" (120–200 cm)
Machine Parameters	Max. Speed	16.8 mph (27 km/h)
	Typical Range ¹⁾	28.0 miles (45 km)
	Max. Slope	15%
	Traversable Terrain	asphalt/flat pavement; obstacles < 0.4 in (1 cm); gaps < 1.2 in (3 cm)
	Operating Temperature	14–104°F (-10–40°C)
	Storage Temperature	-4–122°F (-20–50°C)
	IP Rating	IP54
Battery	Nominal Voltage	36 VDC
	Max. Charging Voltage	42 VDC
	Charging Temperature	32–104°F (0–40°C)
	Nominal Capacity	374 Wh
	Battery Management System	Over-heating, short circuit, over-current and over-charge protection
	Number Of Batteries ²⁾	2
Motor	Nominal Power	300 W
	Max. Power	800 W
Charger	Output Power	71 W
	Input Voltage	100–240 VAC
	Output Voltage	42 VDC
	Output Current	1.7 A
	Duration of Charging	7 h
Features	Shock Absorber	front & rear
	Brake Light	LED rear light
	Atmosphere Light	Customizable colour
	Riding Modes	Speed limit mode, Standard mode and Sport mode

The glowing lights of your E-Tripp Scooter have been programmed with green lights. If you wish to change it, you must use only an Android phone and download the m365 Tools app. [This only works on Android phones.](#)

happy owner's manual

Thanks for choosing the ES4 powered by Segway


Your KickScooter is a fashionable transportation device with mobile app, allowing you to connect with other riders.

Enjoy your ride and connect with riders worldwide!

⚠ WARNING!

Always use both electric brake and foot brake for emergency stopping. Otherwise you risk falls and/or collisions from not achieving the max. braking capability.

Note: this is a not foldable, rigid city version KickScooter

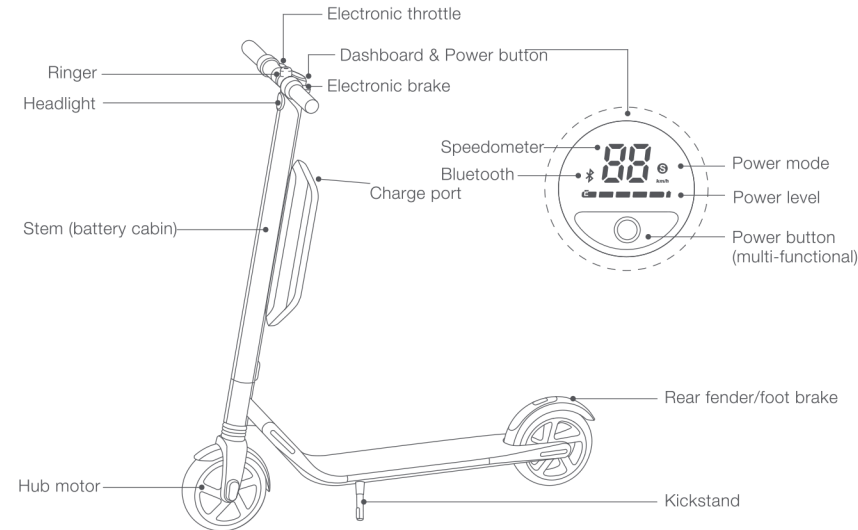

Dashboard & Power Button

Speedometer: Indicates the current speed. Also displays error codes when faults are detected.

Power level: Indicates the remaining battery level with 5 bars. Each bar equates to approximately 20% power level.

Power mode (double click the power button to switch the mode):

—Red "S" icon: Sport mode (maximum power/speed and reduced range).

—White "S" icon: Standard mode (moderate power/speed and range).

—No "S" icon: Speed limit mode (minimum power/speed and increased range).

Bluetooth: A blinking Bluetooth icon indicates that the vehicle is ready to connect. A solid Bluetooth icon indicates that the vehicle is connected to a mobile device.


Power button: Short press to power on. Long press to power off. When powered on, single click to turn on/off the headlight.

Double-click to change power mode.




How to charge your step



Your KickScooter is fully charged when the LED on the charger changes from red (charging) to green (trickle charge). Close the charge port cover when not charging.

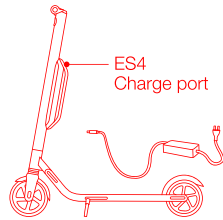

- 1 Open the charge port cover on top of the battery.
- 2 Insert the charge plug.
- 3 Close the charge port cover when finished.

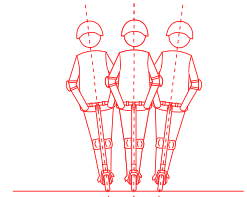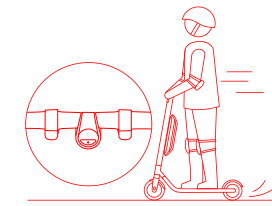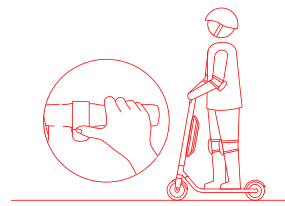

3. Put your other foot on the footrest to keep both feet stable. Press the throttle with right hand to speed up when you are balanced.

4. Slow down by releasing the throttle; stir the brake handle thumb shifter quickly and stamp the fender with foot at the same time to trigger mechanical braking in order to make a sharp brake.

5. To turn, shift your body weight and turn the handle slightly.


Your First Ride




⚠ There are safety risks when learning to ride the KickScooter. You must read the Safety Instructions via the App before your first ride.

Install the App on your mobile device (with Bluetooth 4.0 or above), connect to the KickScooter with Bluetooth, and follow the App instructions to activate your KickScooter and enjoy the full performance. Scan the QR code to download the Segway-Ninebot App (iOS 8.0 or above, Android™ 4.3 or above).


1 Install the App and register/login.

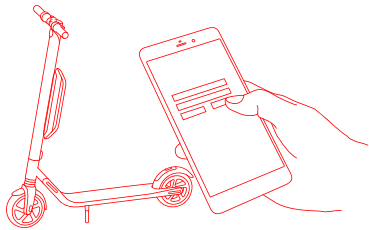

2 Power on the KickScooter. A blinking Bluetooth icon indicates the KickScooter is waiting for a connection.

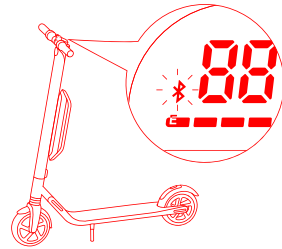

3 Click "Vehicle" → "Search device" to connect to your KickScooter. The KickScooter will beep when the connection is successful. The Bluetooth icon will stop blinking and remain illuminated.

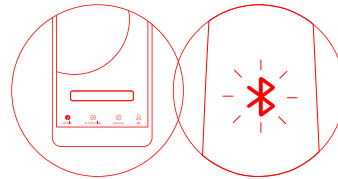


4 Follow the App instructions to activate the KickScooter and learn how to ride safely. You can now start to use your KickScooter, check the status with App, and interact with other users. Have fun!




Warnings




⚠ DO NOT ride the scooter in the rain.

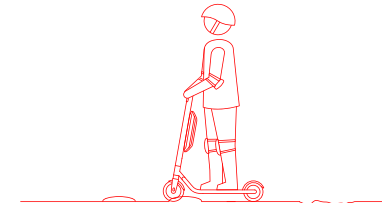


⚠ DO NOT ride over speed bumps, thresholds, or other bumps at HIGH SPEED.

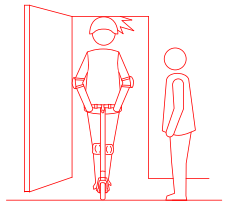


⚠ Watch your head when passing through doorways.

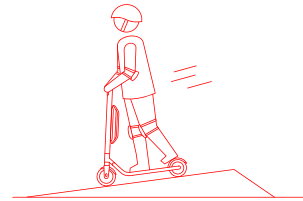

⚠ Watch your speed when traveling downhill. Use both brakes together when traveling at high speed.

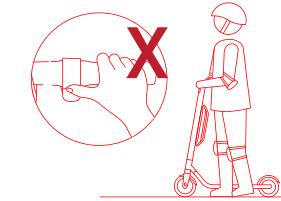

⚠ DO NOT press the throttle when walking with the scooter.


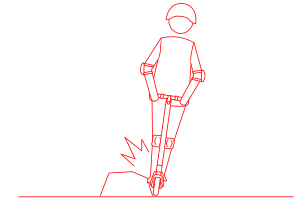


⚠ Avoid contacting obstacles with the tire/wheel.


Learning how to ride




1. Power on the scooter and check the indicator lamp power level. Charge the scooter if the battery level is low.

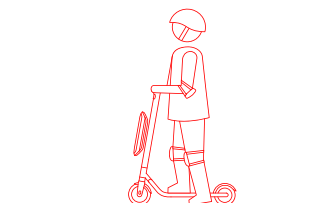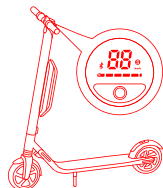


2. Stand on the footrest with one foot and push off with your foot to start gliding.

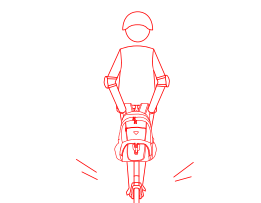

⚠ DO NOT carry heavy objects on the handlebar.

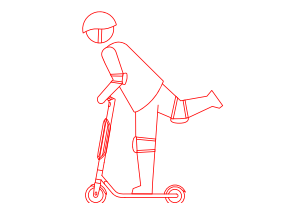

⚠ DO NOT ride the scooter with only one foot.

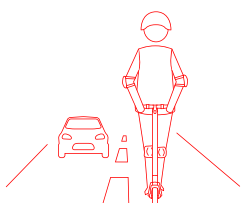

⚠ DO NOT ride on public roads, motorways, or highways.